


**STEPS TO INSTALL OPTIONAL HELM WINDSHIELD:**

1. Position Windshield on Helm Stand as shown in pictures below.
2. Center Windshield and press it firmly down against Helm Stand as in pictures.
3. Use a pencil to mark the 4 hole locations on Helm Stand vinyl cover. Make sure

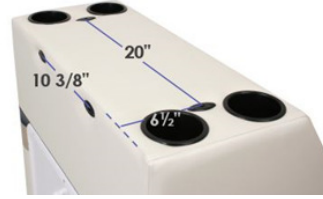

hole locations match these measurements

4. Alternative On Deluxe Helm only: Hold windshield firmly in place. Using 5/8" drill bit, drill the 2 holes on top of Helm Stand through Helm structure, using holes in windshield as drill bit guide. Mark side holes with pencil.
5. Suggestion: Cut small starter hole (size of drill bit) in vinyl cover at hole locations with utility knife to prevent vinyl from tearing when drilling.
6. Using 5/8" Drill Bit, drill through vinyl cover and Helm Stand structure at 4 marked hole locations. Be careful that vinyl and foam under padding are not caught in drill bit and tear.
7. Insert 4 oval shaped windshield mounting brackets into drilled holes and attach each bracket to Helm Stand with 2 black wood screws.
8. Place Windshield on Helm Stand, aligning holes in windshield with drilled holes and secure into holes with Black Twist Tabs.



## CN200 STANDARD HELM CONSOLE w/WINDSHIELD

Optional Windshield



## CN201 DELUXE HELM CONSOLE w/WINDSHIELD

Optional Windshield



## DIMENSIONS FOR BOTH DELUXE & STANDARD HELM CONSOLE WINDSHIELD

